

Christ Media TV Satellite Settings (For most DSTV decoders)

IT IS FREE TO WATCH CHRIST MEDIA TELEVISION. NO CONTRACT. NO PREPAID. COMPLETELY FREE.

1. Go to [Menu] -> [Advanced Options] -> [Dish Installation *(if asked for Pin = 9949)*]
2. Change [Network 2] to [Other] and press [OK]

Confirm the following settings:

Frequency: 12682

Symbol Rate: 27500

FEC: 3/4

Polarization: Horizontal

Use NIT: Yes

2. Select [*Accept all displayed values and leave screen*] and press [OK]

3. Now select [*Scan all networks*] and press [OK]

After the scan has completed, press the [TV] button on your remote and select [Public IS 7/10] & press [OK] look for **Christ Media TV** on the screen abbreviated as *Chris* (*This is because dstv decoders use only 5 letters. On FTA decoders it is written as **Christ Media TV***)

Keep watching Christ Media TV.

be connected